



Sales Service : +33 3 24 73 00 08
After sales: sav@scorpe.eu / +33 3 24 73 00 02

AQUAFAST

AQUAFAST

AQUAFAST

AQUAFAST

AQUAFAST

AQUAFAST

AQUAFAST



FLOATING WATER PUMP

Model 3,5 CV - A

Operating and maintenance instructions

AQUAFAST
AQUAFAST

WELCOME

BEFORE STARTING

ATTENTION!
The motors are delivered without oil

- Check if the two sets screws of the pump on the float are tightened.
- Check the oil level in the engine with the dipstick, **without screwing it in**. The level should be between the "add" and "full" marks. **Do not overfill**. For the type of oil, please read the engine operator's manual. The oil sump capacity is **0,60 liters**.
- Fill fuel tank with clean, fresh, regular grade gasoline, Lead-free gasoline is recommended. **Tank capacity : 0,85 l.**

STARTING

- Start the engine :
 - Control lever in the "STARTER" position
 - Pull on the rope.
 - Bring back the control lever in the "FAST" or "SLOW" position
- Install the hose fitting on the fitting of the pump discharge.
Avoid lifting or overturning the pump.
- Attach a rope to the end of the float (*do not attach it to the strap, except if a vertical descent of the device is provided, from a bridge or a wharf, by example*)
- Put the motor pump in the water.

STOP ENGINE

- Move throttle control lever to « **STOP** » position.
- Put engine in compression.

MAINTENANCE

- The pump and the float do not need a special maintenance. There is no wearing part to be replaced. Please check regularly if the screws and nuts are tightened. Clean the float with any hose hold with silicone.
- We recommend changing oil after every **20 hours** of operation. Remove oil drain plug and drain oil while engine is warm.
- For all other information and adjustments concerning the engine, please read the enclosed engine operating and maintenance instructions.
- **If a service or a repair is needed, please contact us or your nearest distributor.**

CAUTION

If for any reason, storage, transportation, etc. the pump is not put and tightened on the float, you must keep the plate installed on the float. Depending of the outside temperature, some contraction of the float may happen, and consequently some difficult to reinstall the pump on the float.

THE PUMP MAY RUN DRY WITHOUT LIMIT.

TECHNICAL SPECIFICATIONS

Floating water pump

 AQUAFAST

Model 3.5 CV-A



Engine	4 strokes
Full throttle autonomy	40 minutes
Minimum water depth for suction	20 millimeters
950 L	0.105 bars
605 L	0.625bars
325 L	0.9 bars
135 L	1.018 bars
0 L	1.07 bars
Dimensions	87 x 60 x 39 cm
Weight	17 kg

A
Q
U
A
F
A
S
T